

# USER MANUAL

Neck & shoulder shiatsu massager  
Item no.: 70606



**Important:**

Please keep this manual properly for future reference. Before use this appliance read all the instructions carefully.

**Safety instructions:**

To reduce hazards or risks of electrical shock, burns or any other injuries please follow basic safety instructions as below.

- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- DO NOT reach for an appliance that has fallen into water. Unplug it immediately.
- DO NOT use while bathing or in the shower.
- DO NOT place or store appliance where it can fall or be pulled into a tub or sink.
- DO NOT place into or drop into water or other liquid.
- NEVER use pins or other metallic fasteners with this appliance.
- Keep dry-DO NOT operate in a wet or moist condition.
- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting or taking off parts and attachments.
- Close supervision is necessary when this appliance is used by, on or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. ONLY use attachments provided with the unit.
- NEVER operate this appliance if it has a damaged cord or plug, if it's not working properly, or has been dropped or damaged, or dropped into water.
- Keep cord away from heated surfaces.
- NEVER use while sleeping or fall asleep while using the massager.
- NEVER drop or insert any object into any opening.
- DO NOT operate while aerosol (spray) products are being used or where oxygenise being administered.

- DO NOT operate under a blanket or pillow. Excessive heating can occur or cause fire, electric shock or injury to persons.
- DO NOT carry this appliance by power cord or use cord as handle.
- To disconnect, turn all controls to the “off” position, then remove plug from outlet.
- This appliance is designed for personal; non-professional use only.
- DO NOT use outdoors.
- DO NOT use on an infant or invalid or on a sleeping or unconscious person.
- DO NOT use on sensitive skin or on a person who is not sensitive to heat.
- DO NOT crush. Avoid sharp folds.
- DO NOT carry, kindle, pull or twist the appliance on the cable, the power supply unit or the control.

### **Cautions:**

Please read all the instructions carefully before operating.

- This appliance is not designed to be used by persons (including children) with limited physical, sensory or mental abilities, or by persons with insufficient experience and or knowledge, unless under observation by a person responsible for their safety, or unless they have been instructed in the use of the device.
- Children must be supervised to ensure that they don't play with the device.
- Consult your doctor prior to using this product if
  - you are pregnant,
  - you have a cardiac pacemaker, artificial joints or electronic implants
  - you are suffering one or more of the following illnesses or complaints: circulation disorders, varicose vein, open wounds, bruises, broken skin, inflammation of the veins.
- Do not use this unit to supplement medical treatment.
- If you experience any pain or discomfort during the massage,


please stop immediately and consult your doctor.

- Never leave this appliance unattended, especially children are present.
- Never use this product directly on swollen or inflamed areas or skin eruptions.
- DO NOT use this product before bed. The massage has a stimulating effect and may delay sleep.
- This product should NEVER be used by any individual suffering from any physical condition that would limit the user's capacity to operate the controls or who has sensory deficiencies in the lower half of their body.
- Children or invalids without adult supervision should not use this unit.

### Technical parameters:

Description	Neck & Shoulder Shiatsu Massager		
Model no	MSS-303	Power	24W
Input voltage	12Vdc 2A		

### Operation buttons:

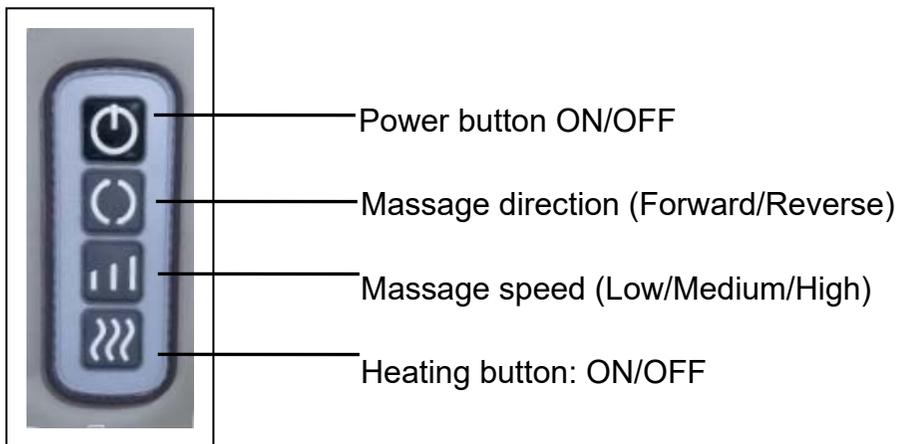

**Step 1:** Check the product and the cable of the adapter carefully before using and make sure the appliance and its accessories are in good condition.

**Step 2:** Plug the power adapter into the power supply socket and connect the massager. Make some adequate adjustment to fit for the required massage position in your body.

**Step 3:** Press the Power button 1<sup>st</sup> time to turn on the appliance. The unit is at automatic massage program, heating on, massage at medium speed, bi-direction interchangeable per every minute.

**Step 4:** Press the direction button, the massage direction will be changed and continuously running in a single direction.

**Step 5:** Press the speed button, massage speed will be changed in the following sequence, from Medium to High, from High to Low, then from Low to Medium.


**Step 6:** Press the heat button to turn on or turn off heating function.

**Step 7:** When the product is left unattended please press the power button to turn off the appliance.

**Note:** for the sake of safety the unit will be shut-off automatically after 15 minutes' operation.

### Massage Application Areas:

This massager can be applied to use in neck & shoulders, back, waist, abdomen, thighs or legs.

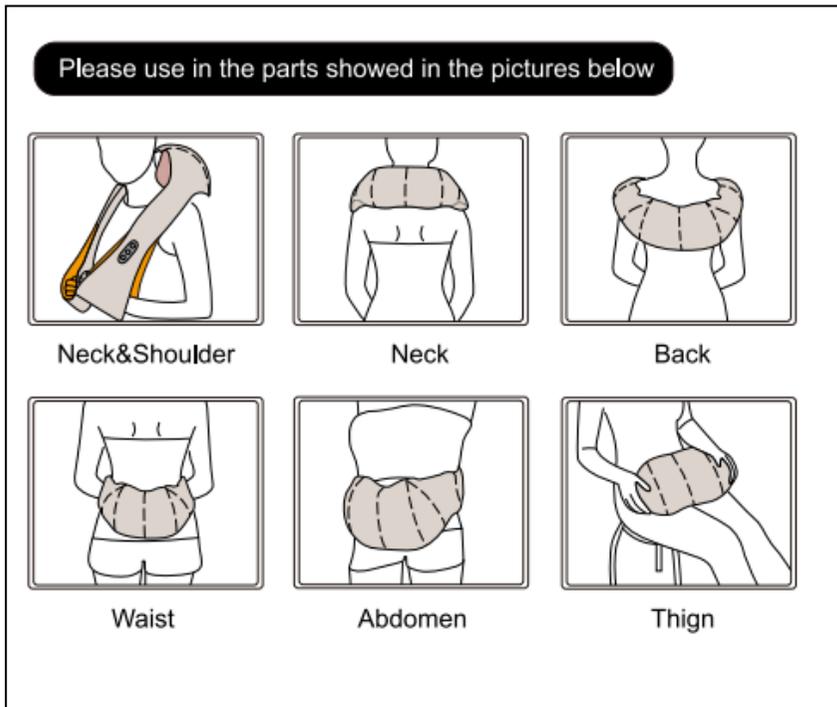

### Cleaning and maintenance:

Make sure the product is switched off before cleaning. This appliance can be cleaned only by clean soft towel or the cloth like. NEVER use brushes, aggressive cleaning agents, petrol, thinners or alcohol. DO NOT KINK in the cable.